

INSTALLATION INSTRUCTIONS JK CARGO RACK EVO

Fits on:
Jeep Wrangler JK 2 and 4 Doors 2007 - 2019
Part n. JKCRE



!! IMPORTANT WARNING !!



CHECK ALL INSTRUCTIONS BEFORE INSTALLING THE PRODUCT

It is critical that this product be properly and securely assembled and attached to your vehicle. Improper attachment could cause accident, and could cause serious bodily injury or death.

You are responsible for assembling and securing the product to your vehicle, checking the attachments prior to use, and periodically inspecting the products for adjustment, wear and Damage. If you have no mechanical experience, if you don't understand the following instructions, you should have the product installed by a professional installer or other qualified personnel.

COMPONENT LIST:

- n. 2 Side support (Grey)
- n. 1 Rear cover (Black)
- n. 3 Alu slat (Black)
- n. 4 Allen Bolt M8x25
- n. 18 Torx Bolt M8x20
- n. 6 Self Locking nut M8
- n. 6 Washers M8 x 24
- n. 6 Hex bolt M8x15

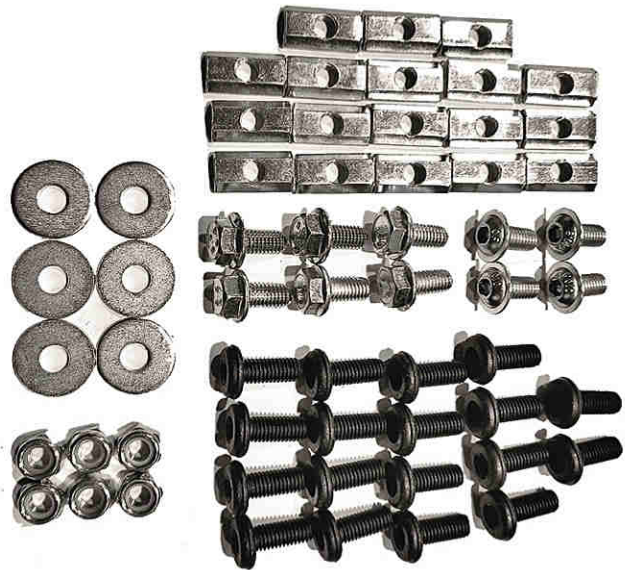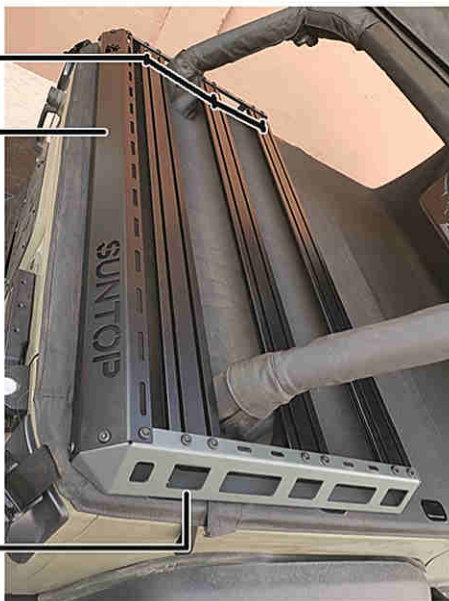

1 slide threaded inserts in the slat channel







2 fix slats on one side support with hex bolts M8x15



3 Check the correspondance between side supports and threaded holes on the car

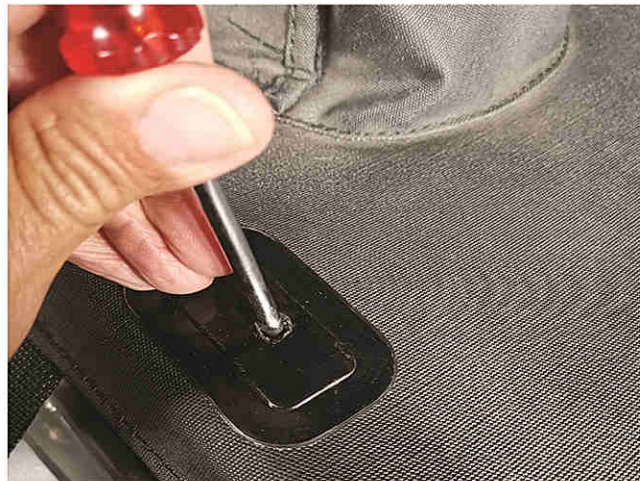


4 remove the parts and make holes in the plastic. Both sides

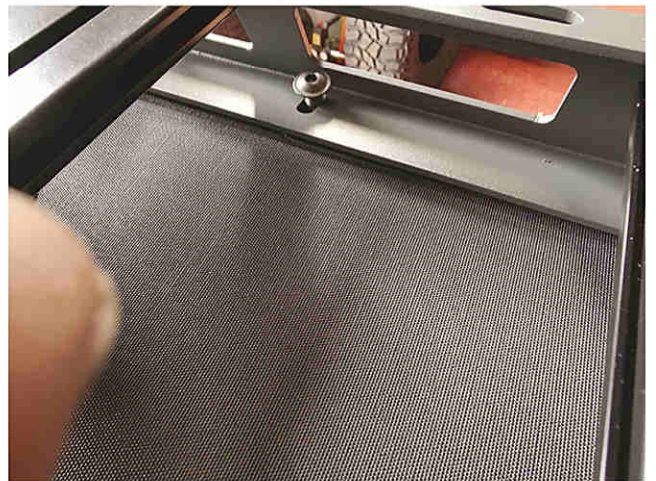


5 position support and slats and screw in with Allen 8x25. Do NOT tighten



6 screw threaded inserts in the second support and position on the car

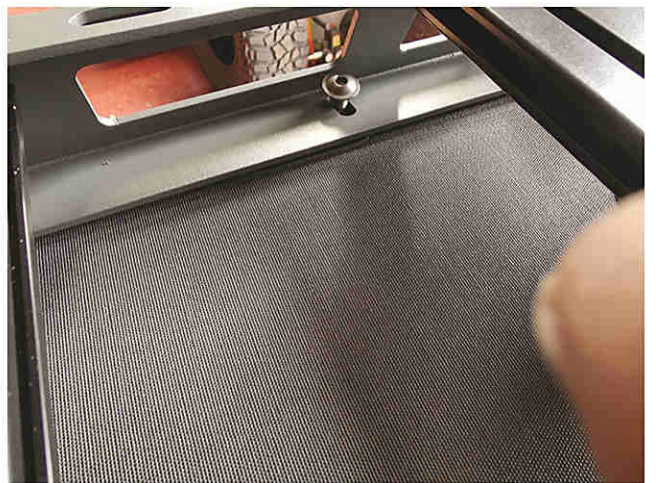

7 position second support and screw in with Allen 8x25. Do NOT tighten

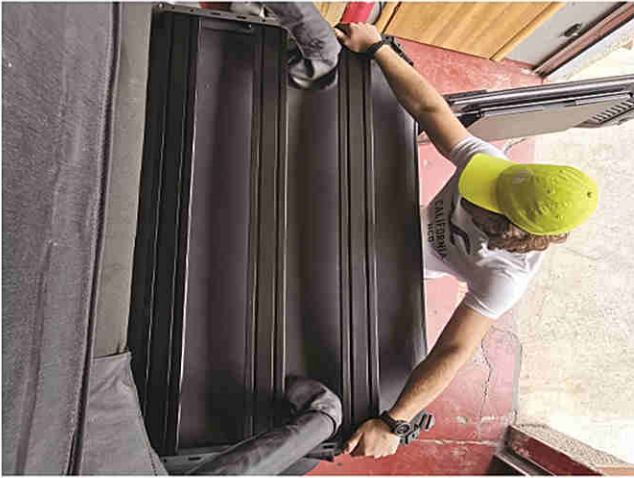


8 Slide the slats in second support and check all parts on the middle line of vehicle. **ALL BOLTS UNTIGHTEN!**



9 Fix rear cover with torx bolt 8x20, washers and nuts. Tighten



10 fix side supports with torx bolts and threaded inserts. **DO NOT TIGHTEN**

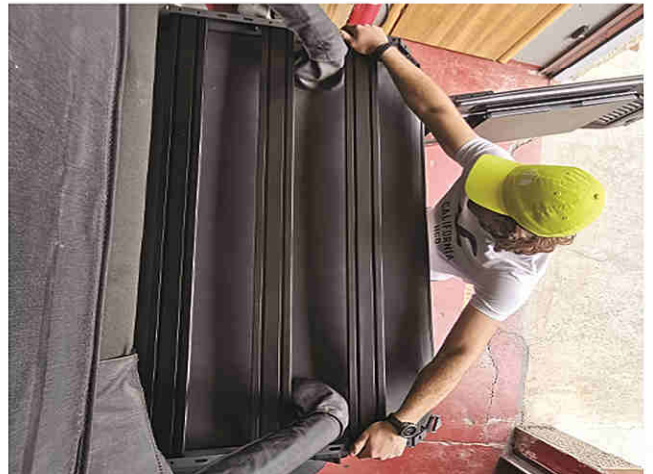

11 Check again all alignments. **TIGHTEN ALL BOLTS**

